



Remote Control Setup Guide


Download PDF 

*To print, download the PDF first.

Remote Control Features

2


- Front

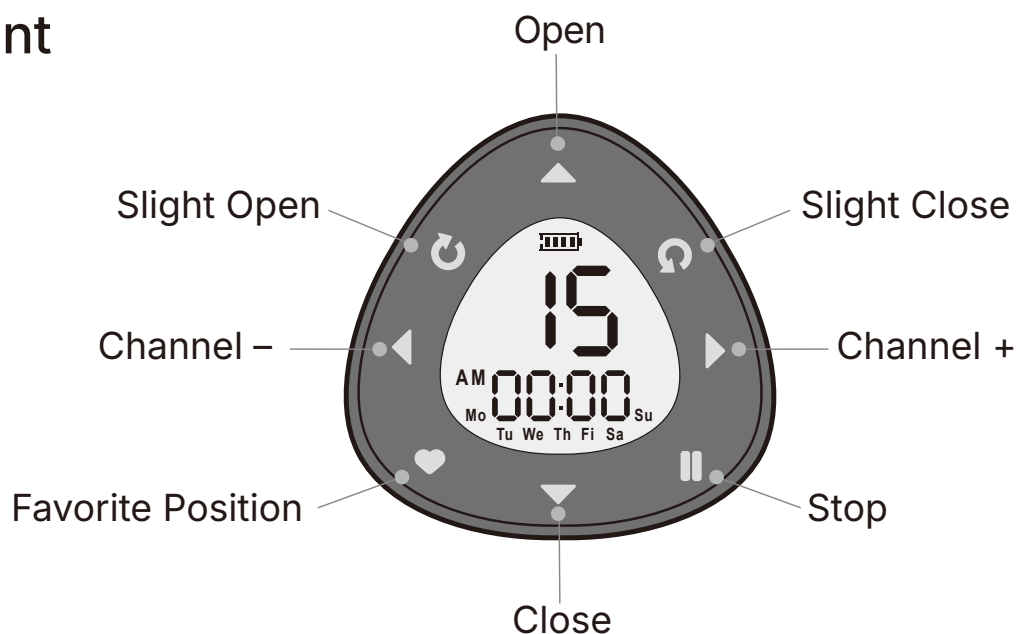

- Screen

Remote Control Battery


12-Hour Time

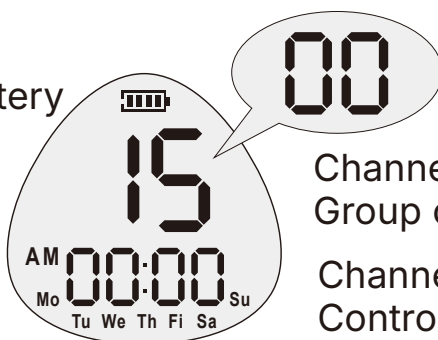

Channel "00":
Group control all blinds

Channel "1-15":
Control max 15 blinds separately


- Back

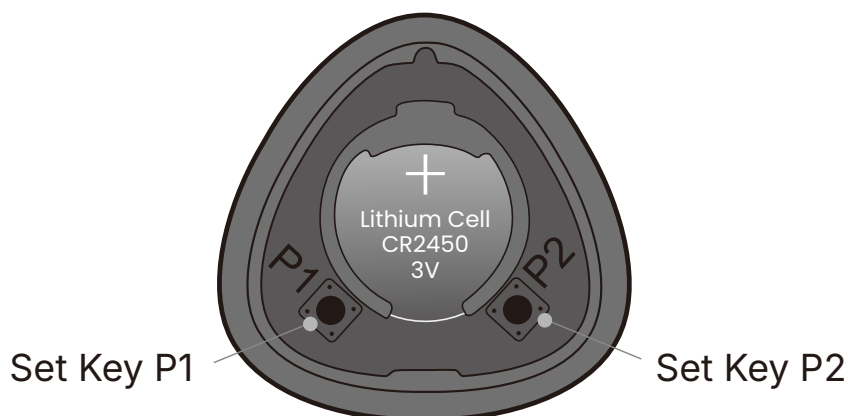



Remote Control Features

3

- For Shangri-la Shades

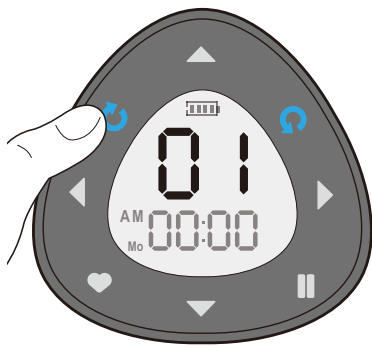

Press "↶" or "↷"

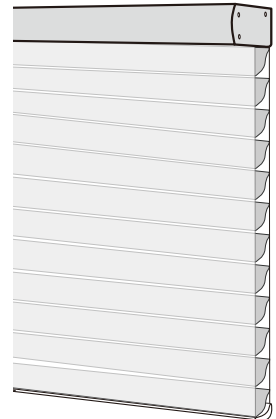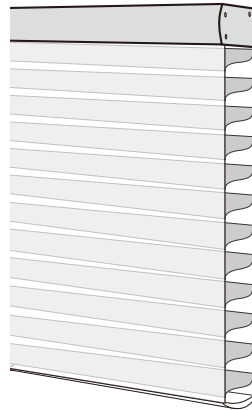


Tilt vanes





Only when Shangri-la Shades reach the bottom limit can slats be adjusted.

- For Zebra Blinds

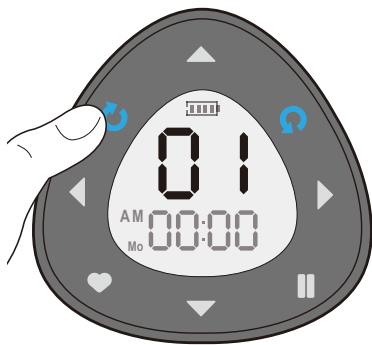

Press "↶" or "↷"

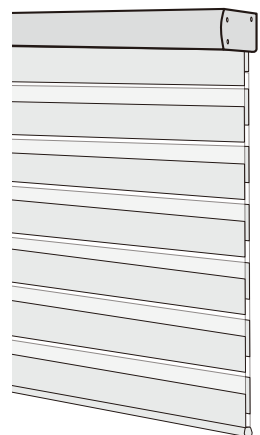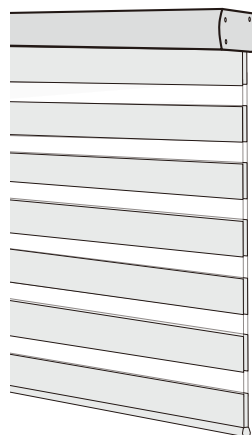


Adjust the overlap of stripes

Remote Control

Activate Remote Control



4

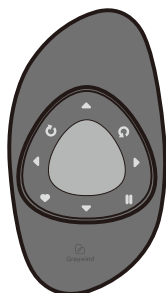




Wall Holder



1

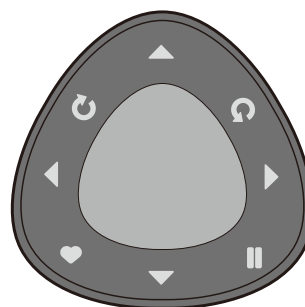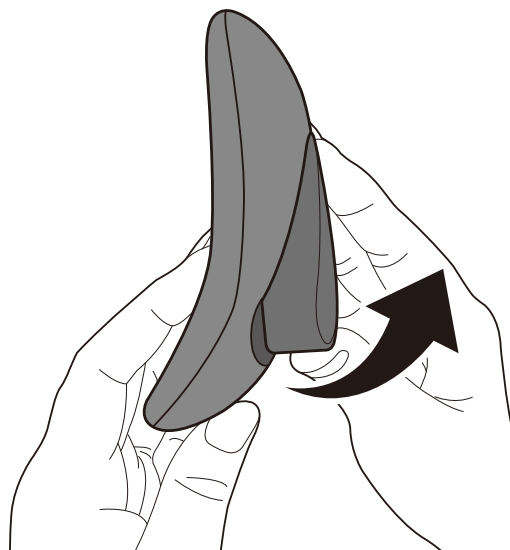


2

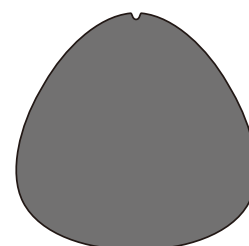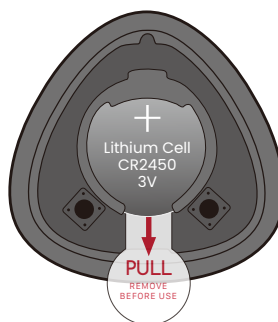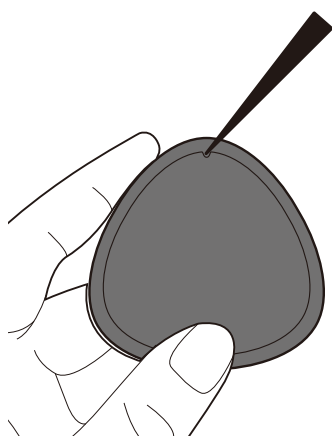


Remote Control

Activate Remote Control

5

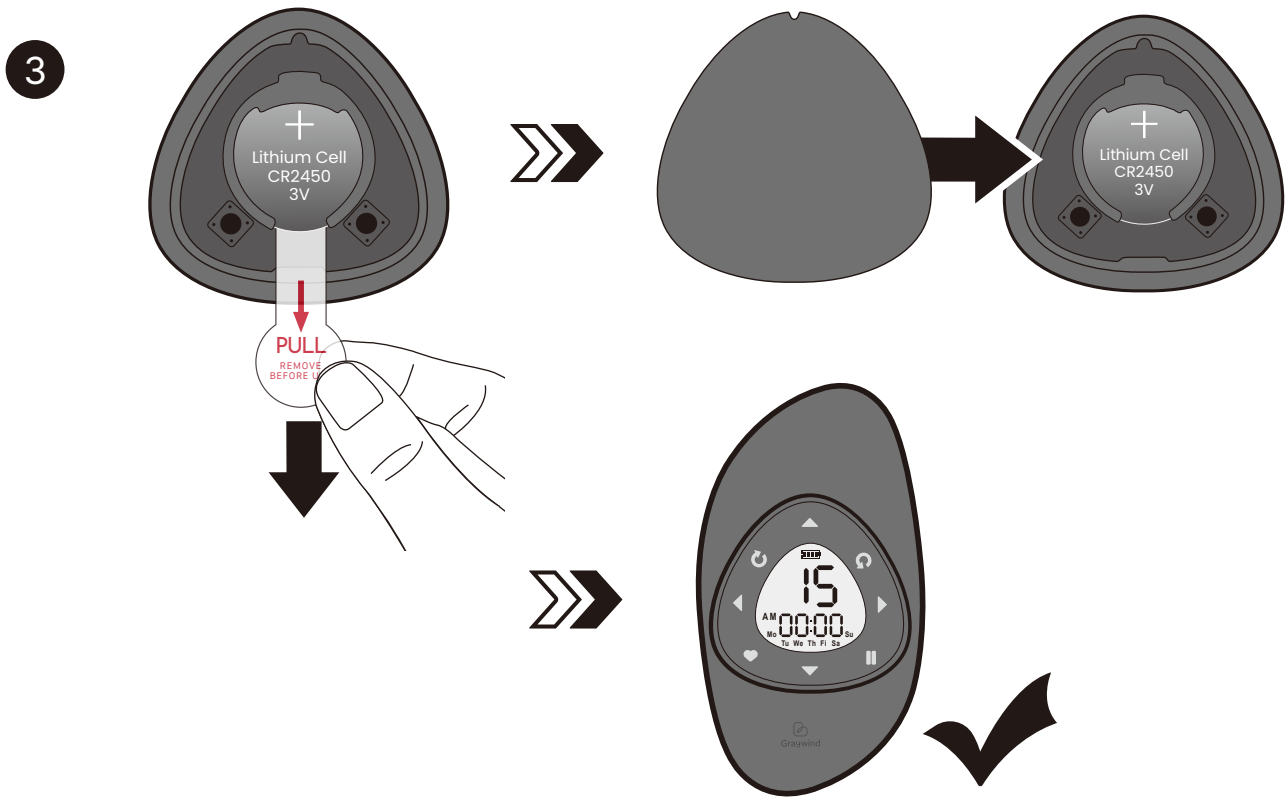

! Congratulations! Remove the sleeping blocker, chooses the channel number (attached to the bottom rod) to control the shade. If it cannot work, please refer to page 15-23.

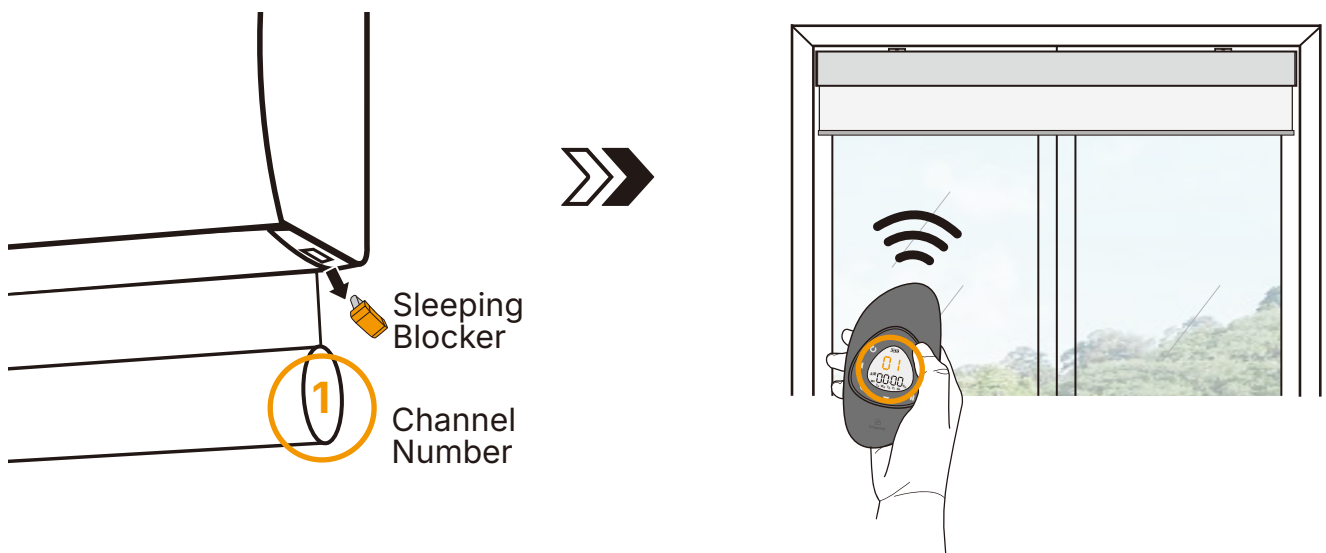


Remote Control

Timing Schedule

6

Clock Setting:

! Please ensure your remote is in setting mode (channel number is flashing). If not, please refer to page 16.

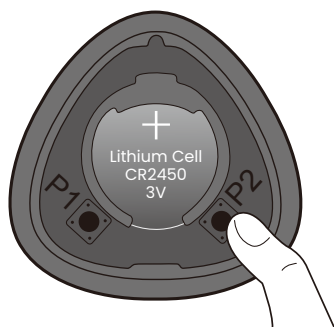


Hold " P2 " for 5s



" 0 " flashes

Adjust time, weeks

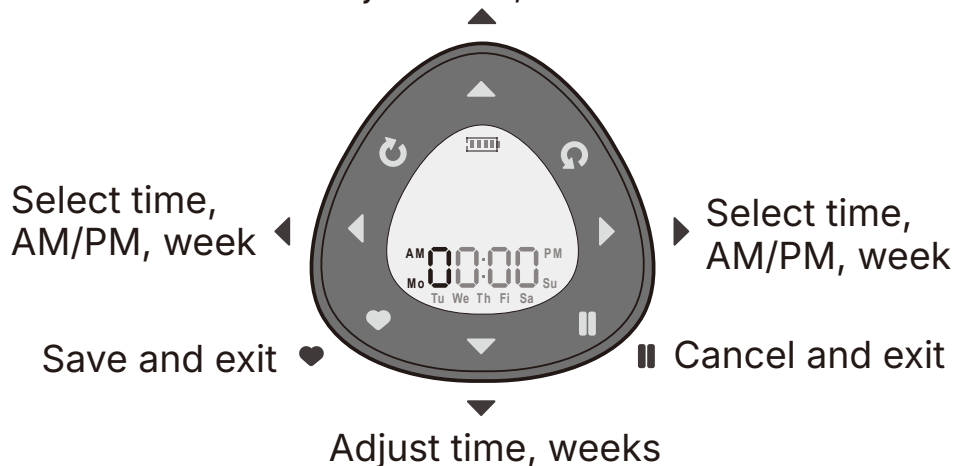

Remote Control

Timing Schedule

7


- 1. You can set at most 20 schedules for each remote.
- 2. Please ensure your remote is not in setting mode (channel number is not flashing). If not, please refer to page 16 to exit setting mode.

1 Enter schedule setting.



Hold "♥" & "||" for 3s

2 Add a new schedule.

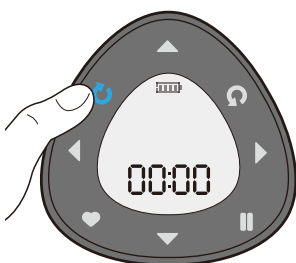

Hold "♥" until the number flashes.

3 Set schedule.



Press "◀" or "▶" to switch between hr and min, the selected one will flash.

Press "▲" or "▼" to select numbers.

Remote Control

Timing Schedule

8

4 Set AM/PM.



Press "◀" or "▶" to select AM/PM




Press "▲" to save, "⊕" will show up.
Press "▼" to cancel, "⊕" will disappear.

5 Set days (Multi-choice).




Press "◀" or "▶" to select days for the schedule.
The selected one will flash.

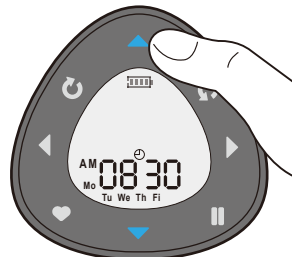


Press "▲" to save, "⊕" will show up.
Press "▼" to cancel, "⊕" will disappear.

6 Set open/close.

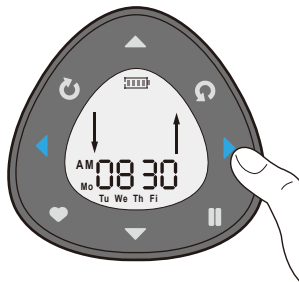

Press "◀" or "▶" to switch open or close, the selected one will flash.

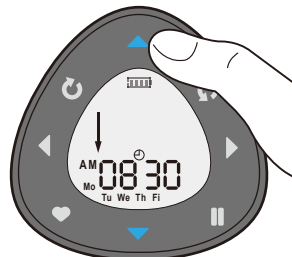


Press "▲" to save, "⊕" will show up.
Press "▼" to cancel, "⊕" will disappear.

Remote Control

Timing Schedule

9


- 7 Set channels (Multi-choice).

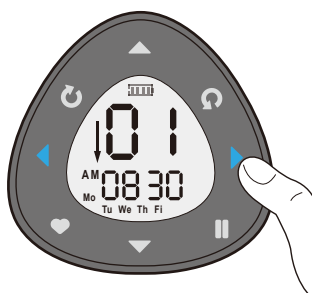

Press "◀" or "▶" to select the channel number.
The selected one will flash.


Press "▲" to save,
"●" will show up.
Press "▼" to cancel,
"●" will disappear.

8

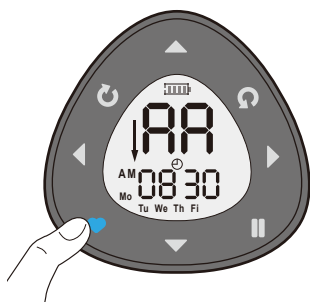

Press "♥" to save all above settings.

9

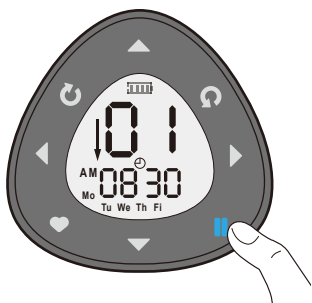

Press "||" to exit schedule setting.




Remote Control

Timing Schedule

10


Double Check:

- 1 Enter schedule setting.

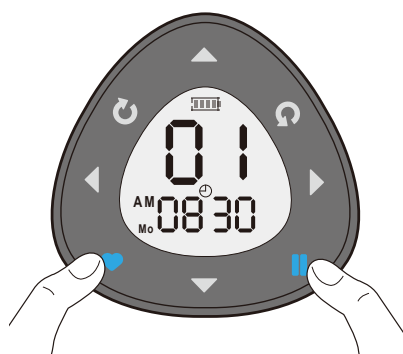

Hold "♥" & "||" for 3s

- 2 Confirm schedule.

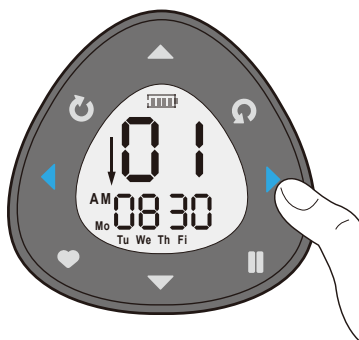

Press "◀" or "▶" to select Schedule.

- 3 Confirm channels in the schedule.



Press "▲" or "▼" to check channels.


Remote Control

Timing Schedule

11


Modify Schedule:

- 1 Enter schedule setting.

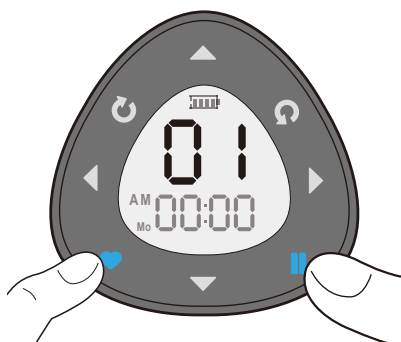


Hold "♥" & "||" for 3s

- 2 Select schedule.

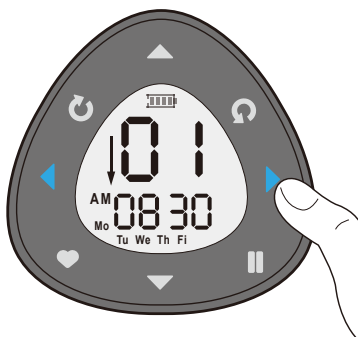

Press "◀" or "▶" to select timers.

- 3 Modify schedule.

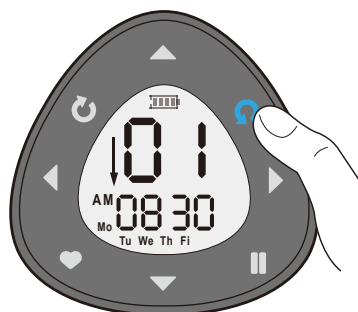

Hold "↻" to modify schedule.




1. The way to modify can be referred by step 3-9 in (P7-P9).
2. When you modify schedule, please note: 00:00 means delete this schedule.

Remote Control

(Optional) Wall Mounting

Method 1


1

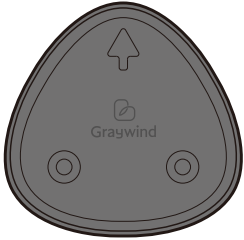


Back



2

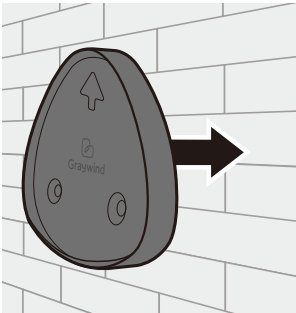


3

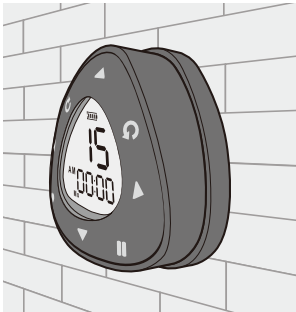


Method 2


1

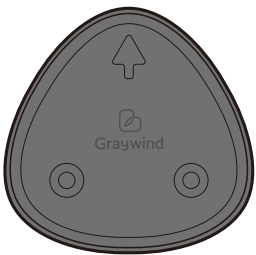


S

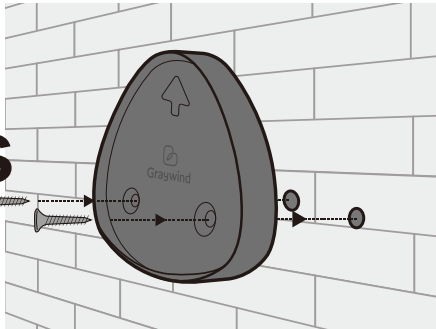

2

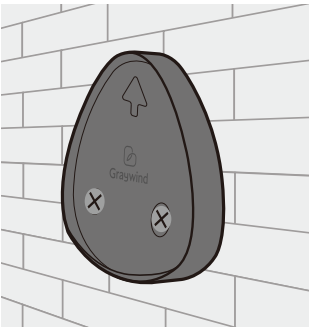

3

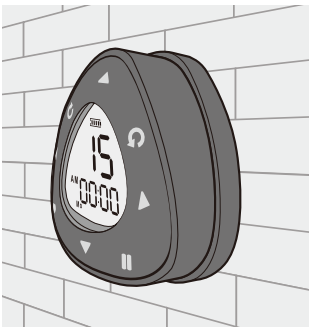

Motor Features

Battery Motor


13



When received, the blocker prevents the motor receiving signal.

To activate it, please remove the sleeping blocker.


If the motor is left idle for over 6 months, please insert the sleeping blocker into the charging port to reduce battery consumption.

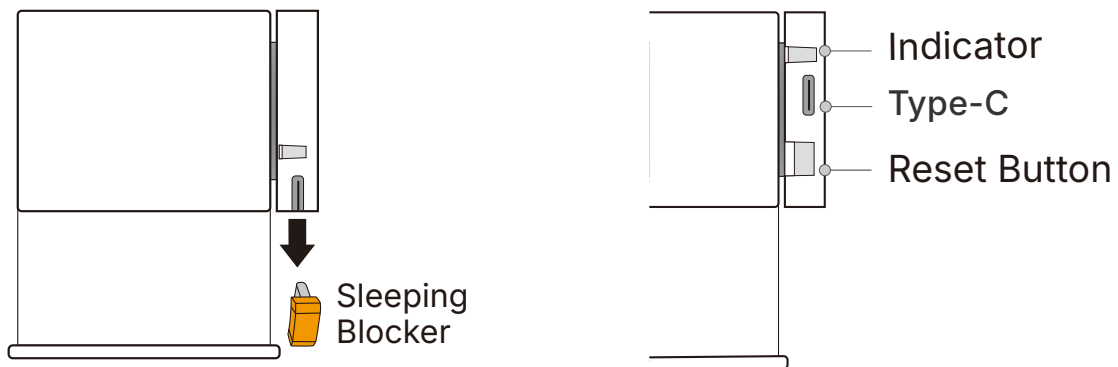


Please fully charge the motor for more than 8 hours before the first use. Once fully charged, it can be used for 3-6 months depending on the frequency of use.





Low battery:

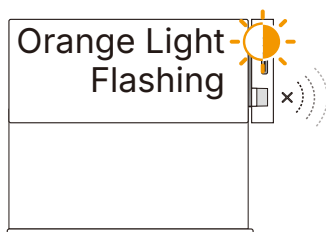


Under Charging:

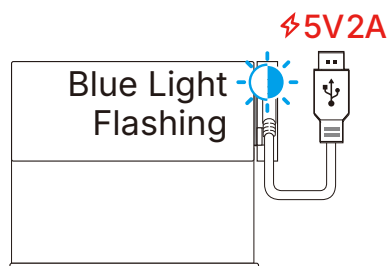

Fully Charged:

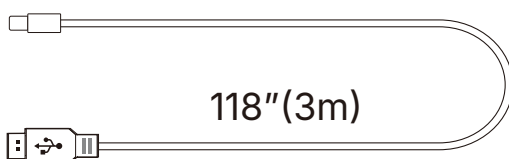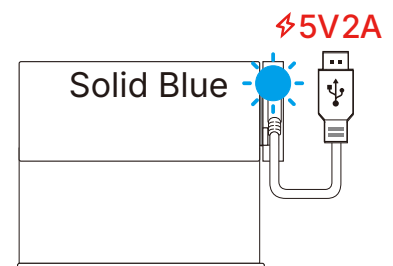

Type-C Cable x1


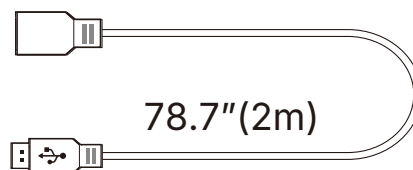


Extension Cable x1
(Optional)

Motor Features

Hardwired Motor

14

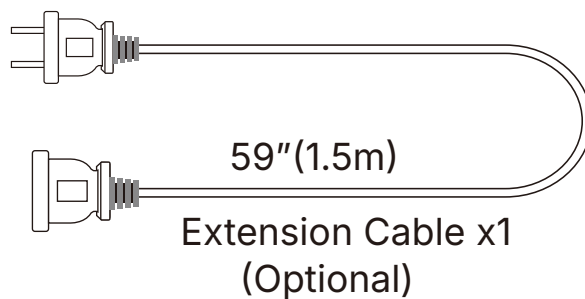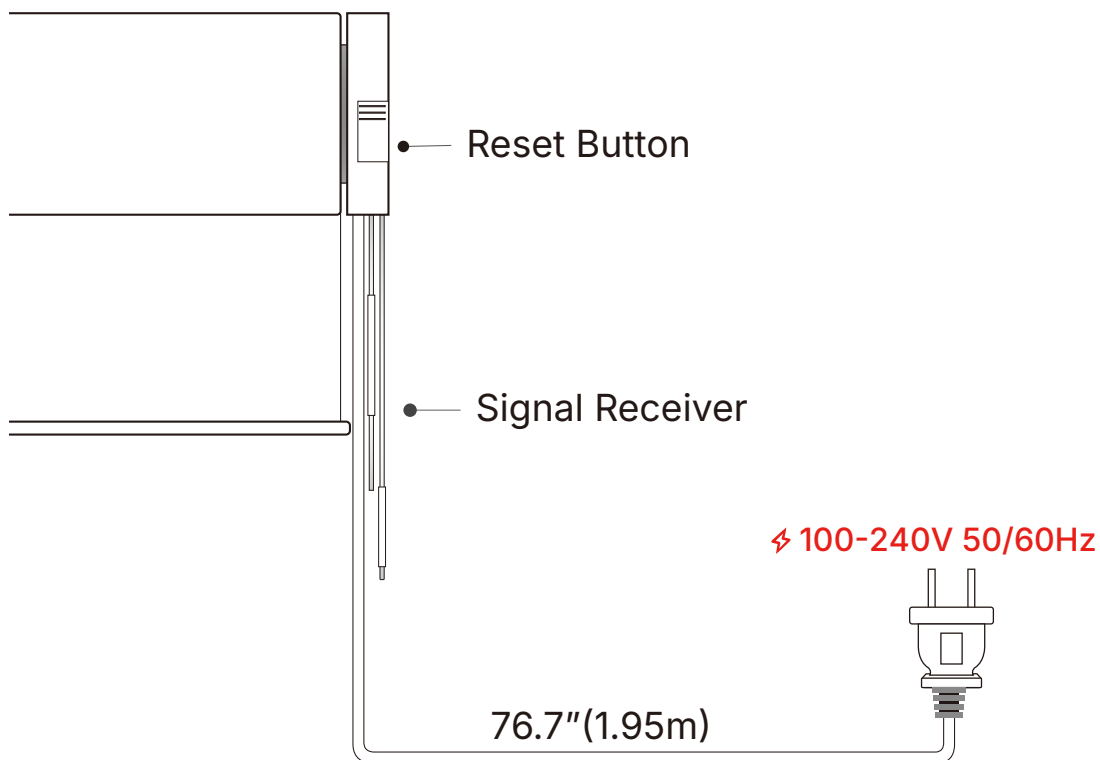


Programming

Restart Motor


15



Be cautious, reset may reverse up & down direction and will delete top & bottom limits, which impact remote control and APP control. Please follow below steps(Page 16-23) thoroughly to finish re-pairing.

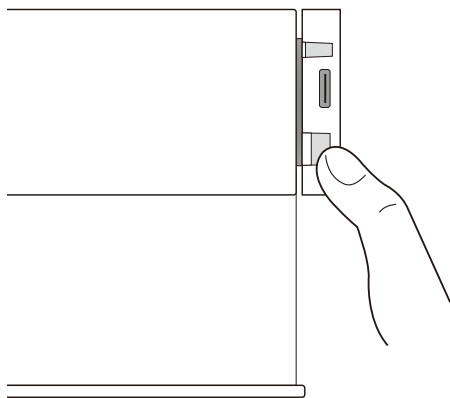

Hold for **16s**

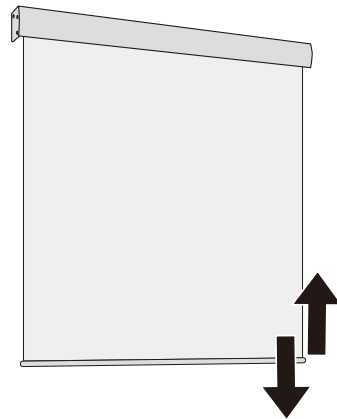

Blind jogs **4x**




Programming

Enter Setting Mode


16

1

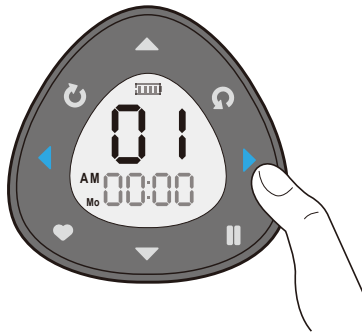

Press " ◀ " or " ▶ ",
choose the channel you
want to set from " 1-15 "

2

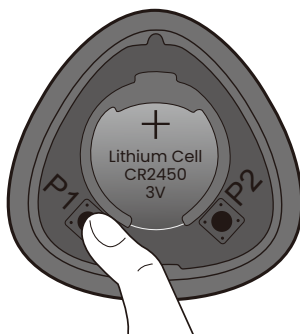

Hold " P1 " for 3s



Channel flashes,
enter setting mode.



It will exit setting mode if hold " P1 " for 3s again
or no operation for 3 mins.


Programming

Pair Motor


17

! Please ensure your remote is in setting mode (channel number is flashing). If not, please refer to page 16.

1

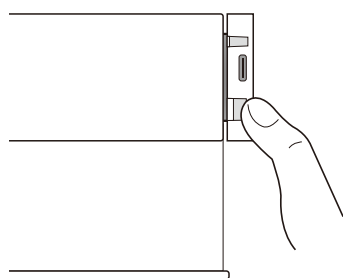


Hold for **2s**

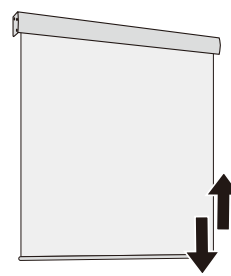

Blind jogs **1x**

2


! Please press " P2 " within 10 seconds after last step.

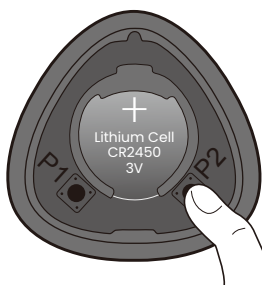

Press " P2 " **1x**



"AA" shows on the screen

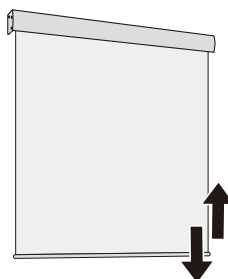

Blind jogs **2x**




! Please repeat step 1-2 on this page when motor has no response. After re-pairing, please check up/down direction, limit positions.

Programming


Check the Up/Down Direction

18


! Use "▲" and "▼" to check directions.

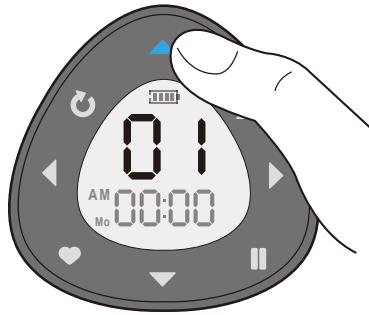


Press "▲"

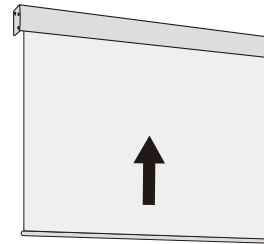

Press "▼"

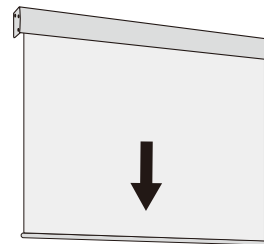

! If it is reversed, please follow below steps.
Please ensure your remote is in setting mode (channel number is flashing). If not, please refer to page 16.

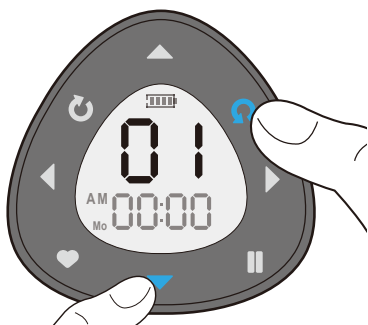

Press "▼" & "⌚"



Blind jogs **1x**




Programming


Set Top Limit Position

19


! Please ensure your remote is in setting mode (channel number is flashing). If not, please refer to page 16.

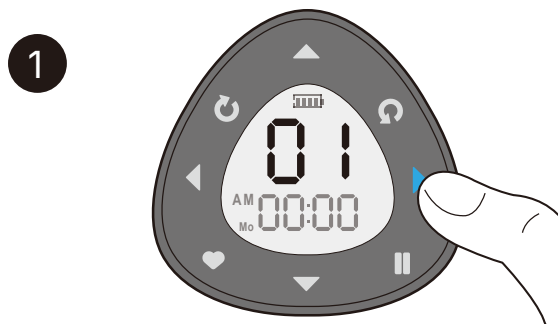


Choose your desired channel
(Take channel 1 for example)

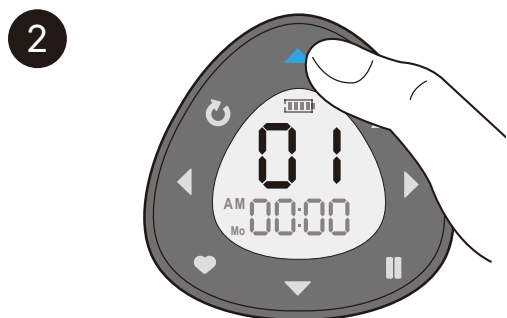

Press "▲"

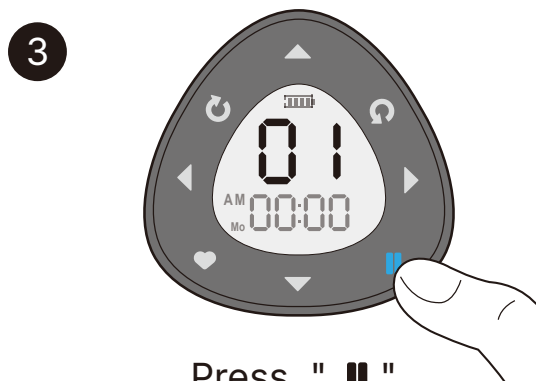

Press "■"

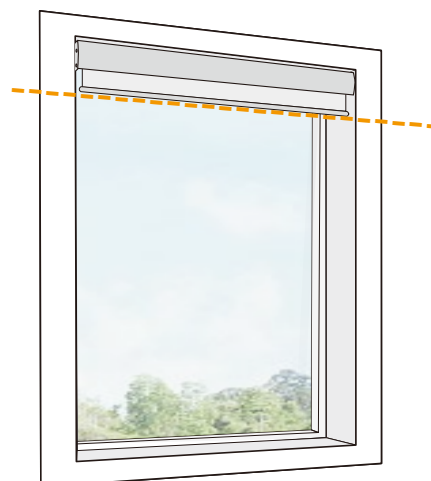


Programming


Set Top Limit Position

20


4

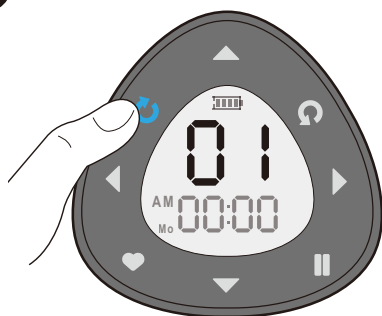


Press "U" to have a precise limit.

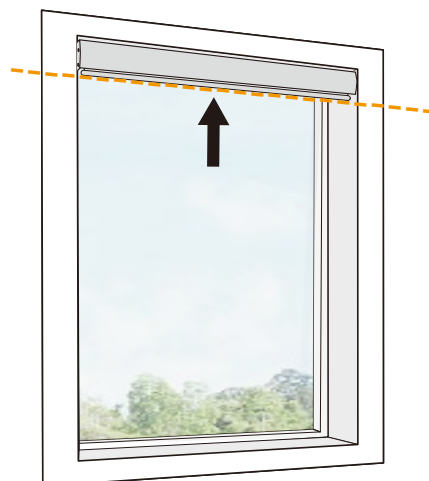

5

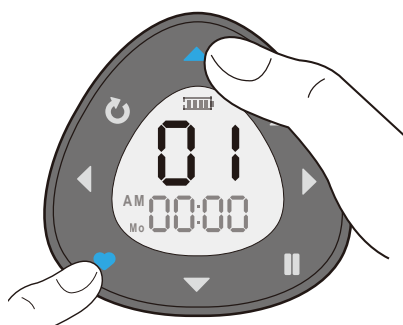

Press "♥" & "▲"

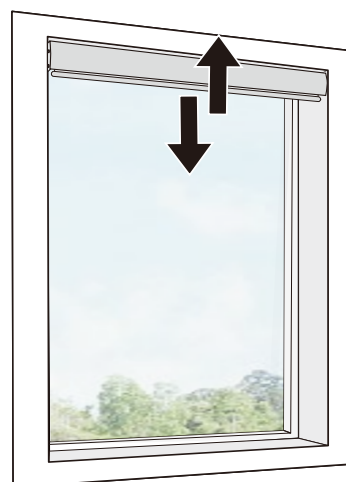

Blind jogs **2x**




Programming

Set Bottom Limit Position

21


! Please ensure your remote is in setting mode (channel number is flashing). If not, please refer to page 16.

1

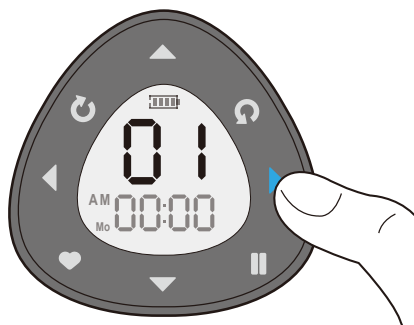


Choose your desired channel
(Take channel 1 for example)


2

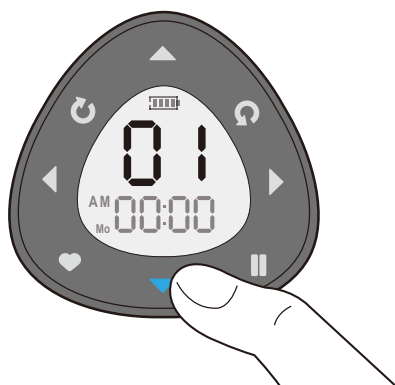


Press "▼"

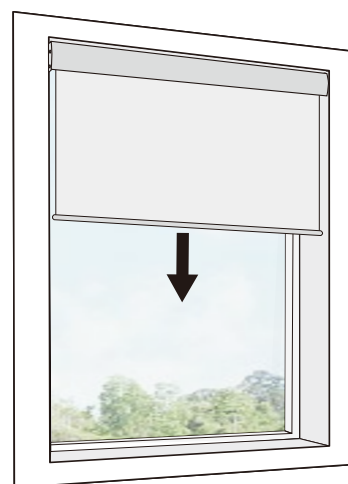

3

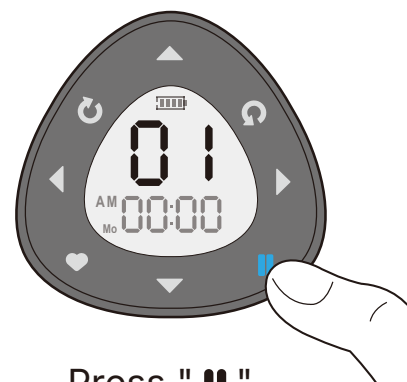

Press "||"

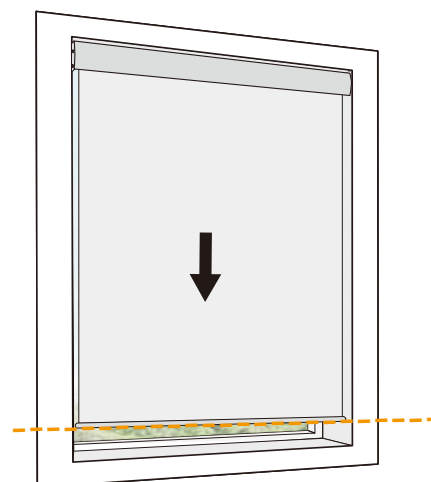


Programming


Set Bottom Limit Position

22


4

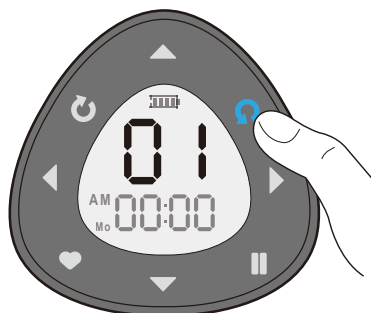


Press "Q" to have a precise limit.

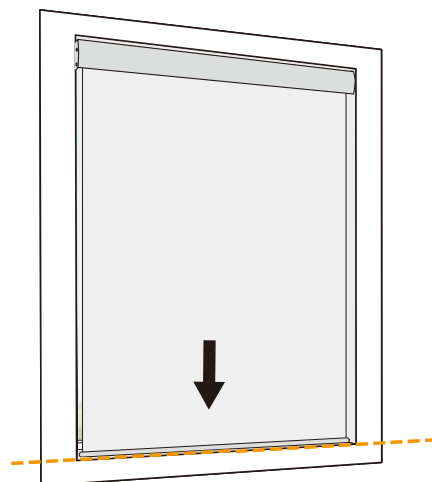

5

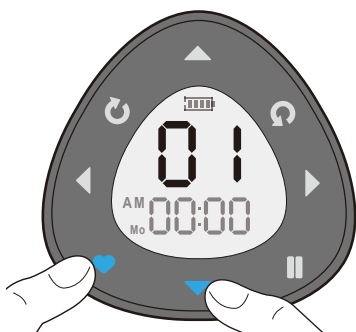

Press "♥" & "▼"

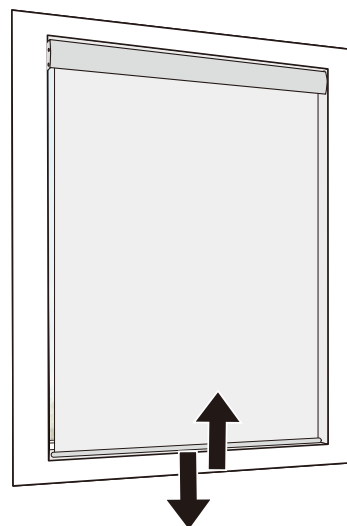

Blind jogs **2x**




Programming


Set Your Favorite Position

23

1. The favorite position is not set from factory.
2. Before setting the favorite position, please ensure that the top and bottom limit positions have been set.
3. Please ensure your remote is in setting mode (channel number is flashing). If not, please refer to page 16.

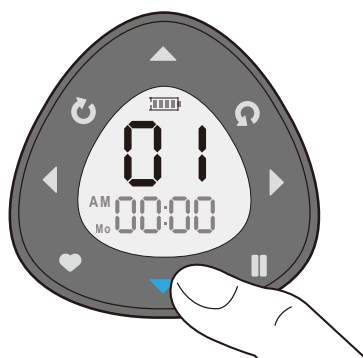


Press "▲" or "▼"

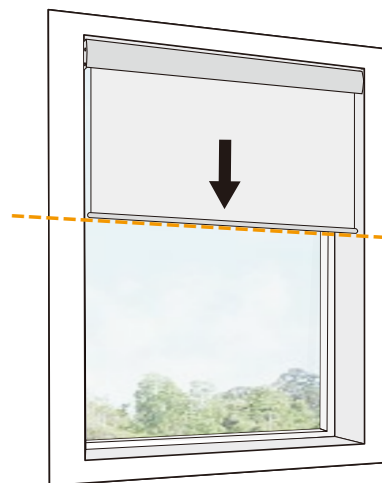

Your Favorite Position



Press "♥" & "⏸"

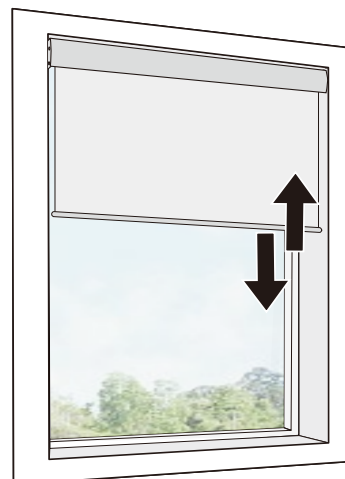

Blind jogs **2x**




Press "♥" and the shade will go to the favorite position.

Programming


Delete Favorite Limit Position

24

 Please ensure your remote is in setting mode (channel number is flashing). If not, please refer to page 16.

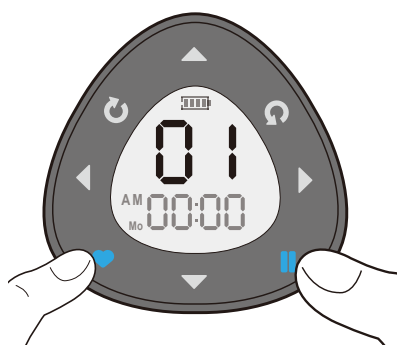

Press " ♥ " & " || "

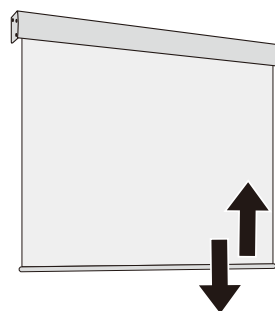

Blind jogs **1x**




Programming

Reset Top Limit Position


25

! Please ensure your remote is in setting mode (channel number is flashing). If not, please refer to page 16.

Delete Old :

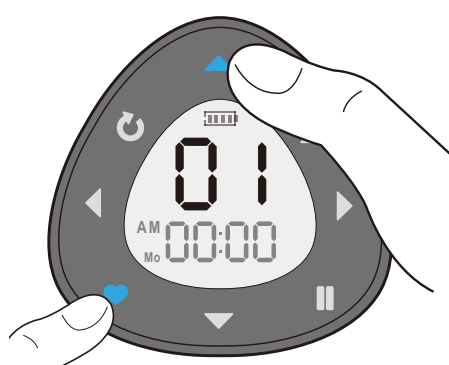

Press " ♥ " & " ▲ "

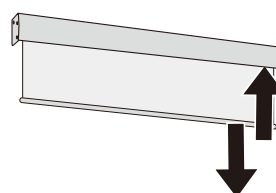

Blind jogs **1x**



Set New:

Please refer to page 19-20 to reset the top limit position.




Programming

Reset Bottom Limit Position


26

 Please ensure your remote is in setting mode (channel number is flashing). If not, please refer to page 16.

Delete Old :

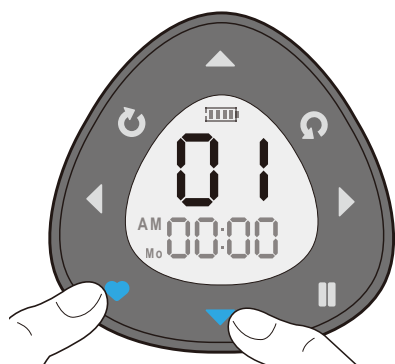

Press " ♥ " & " ▼ "

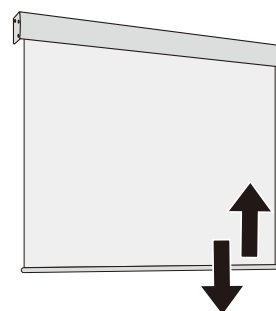

Blind jogs **1x**



Set New:

Please refer to page 21-22 to reset the bottom limit position.



Programming


Adjust Running Speed

27




1. Please ensure your remote is in setting mode (channel number is flashing). If not, please refer to page 16.
2. If the motor does not jog, it may have reached the maximum or minimum speed. There are three speed settings available.

Speed +

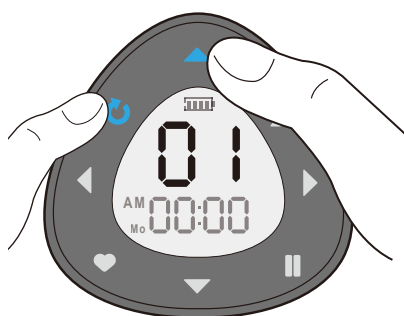


Press "  " & "  "

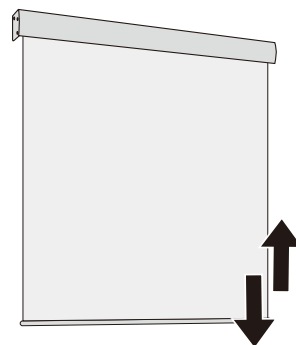


Blind jogs **1x**



Speed -

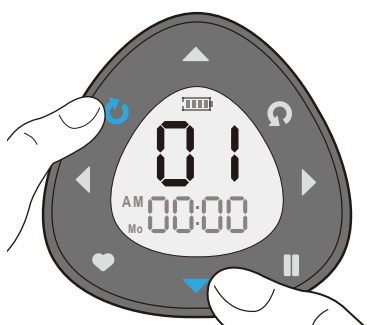

Press "  " & "  "

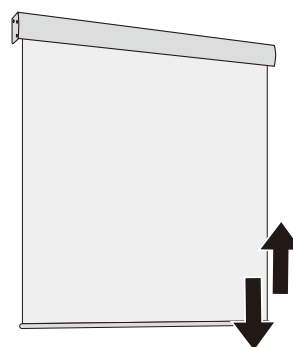

Blind jogs **1x**



Programming

Unpair Motor

28


! Please ensure your remote is in setting mode (channel number is flashing). If not, please refer to page 16.



Choose the channel you want to unpair.
(Take channel 1 for example)



Press "▲" & "■"

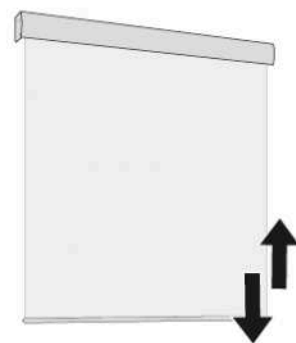

Blind jogs **1x**



! Unpairing does not affect the motor limits.
Simply pair the motor to a new channel.

How to change the rolling position

